SQ-B-60 SERIES

Instruction Manuel

ULTIMATE

www.ultimate.com.tr

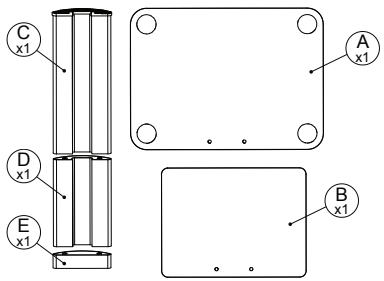

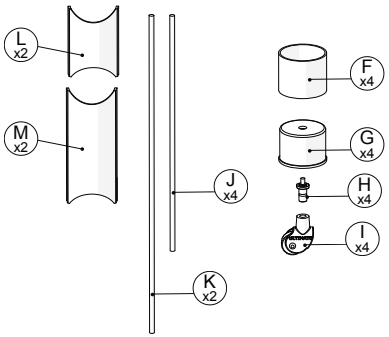

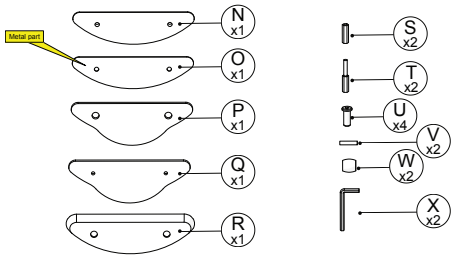

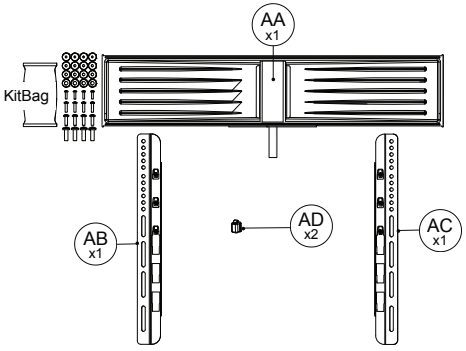

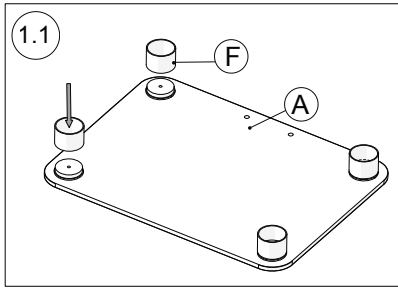

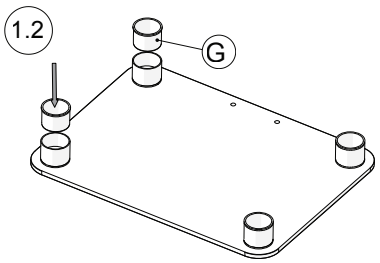

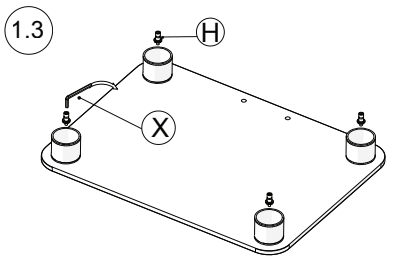

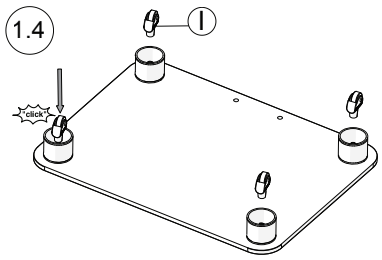

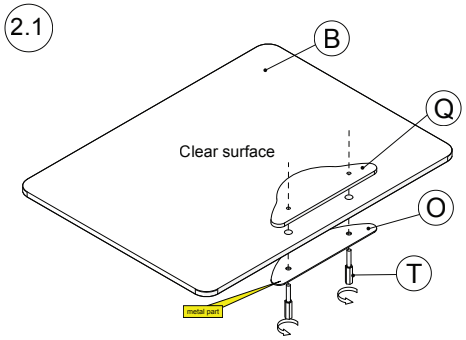

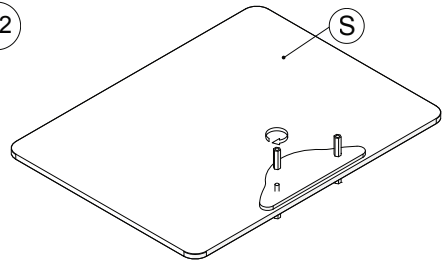

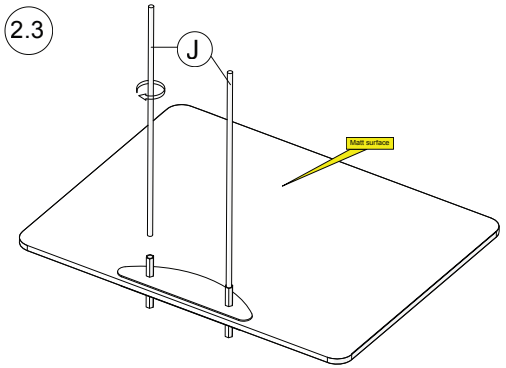

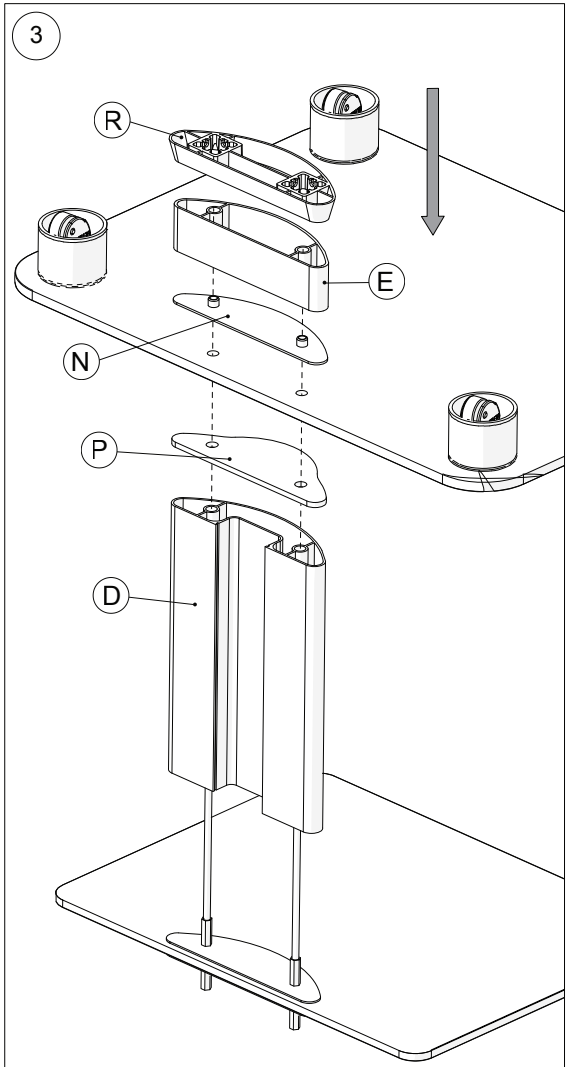

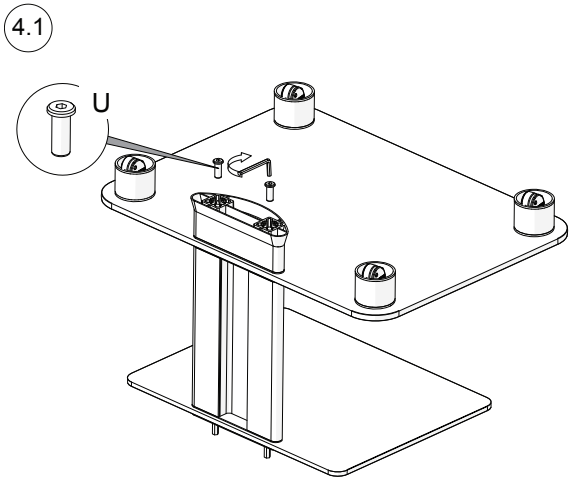

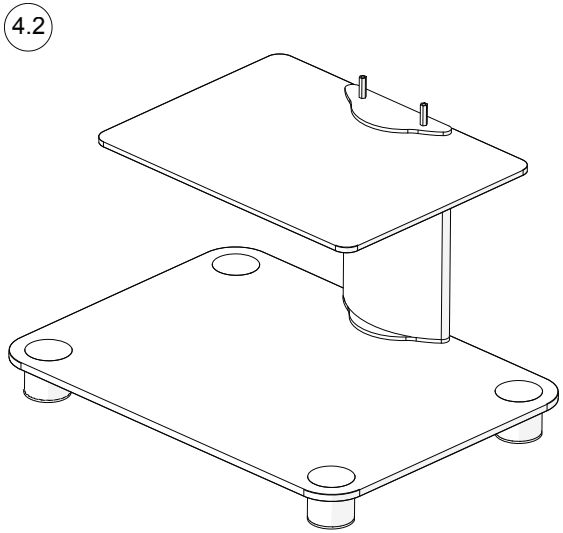

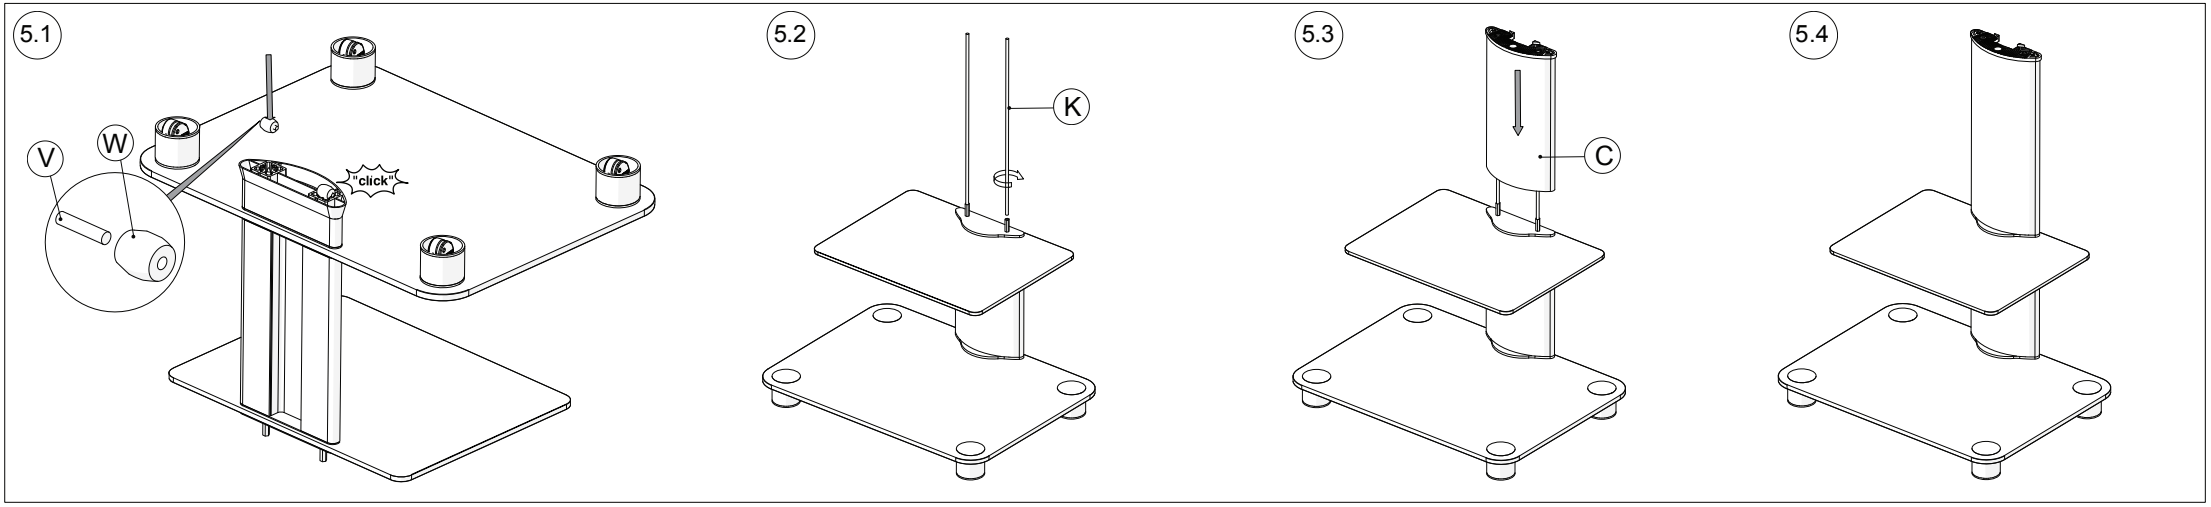

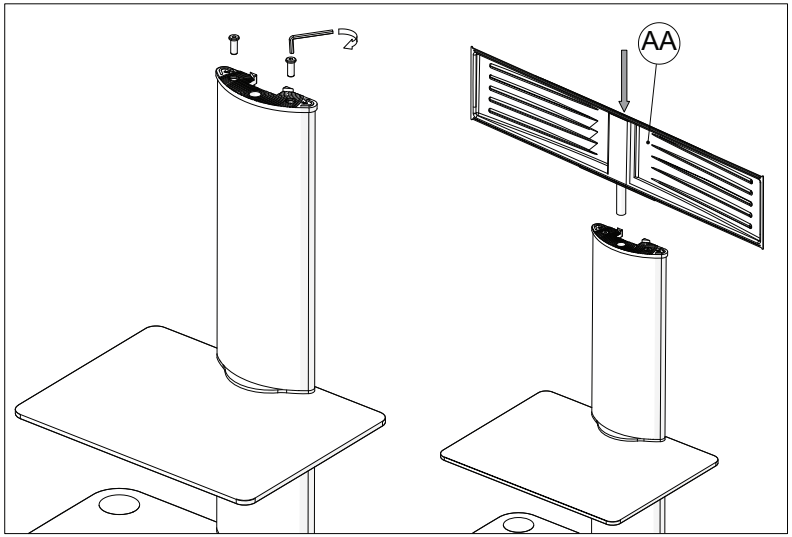

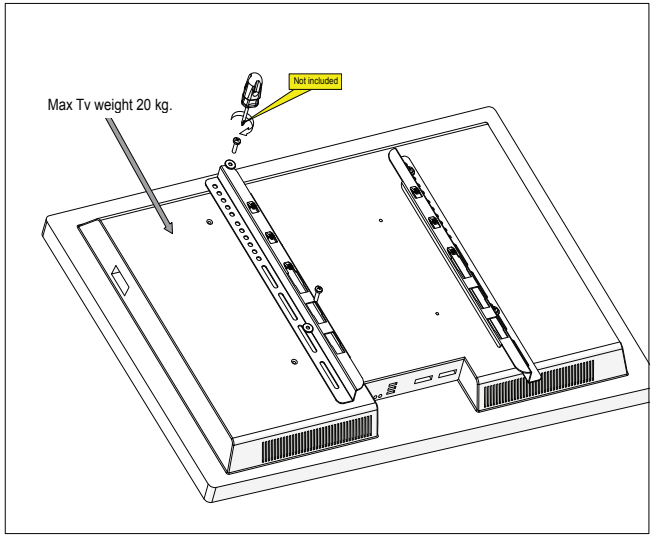

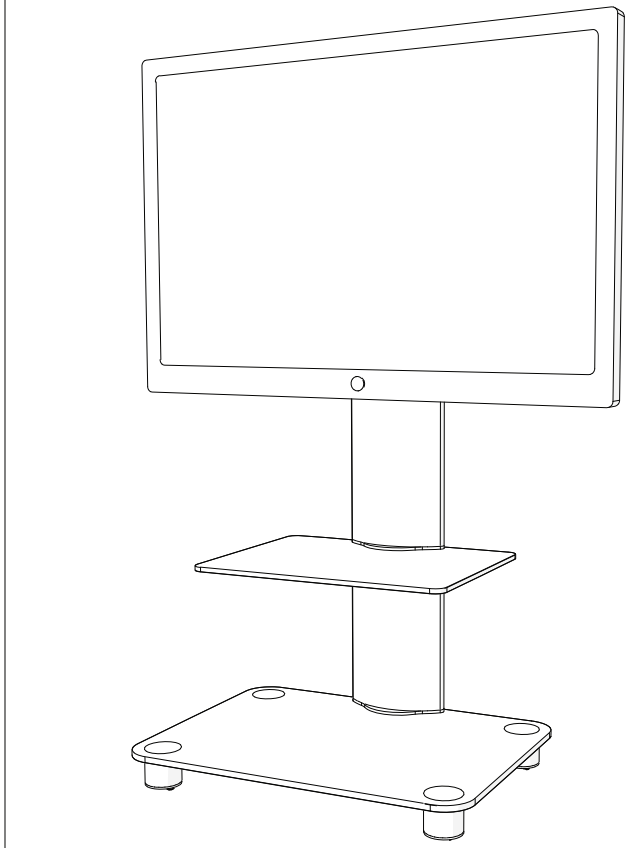

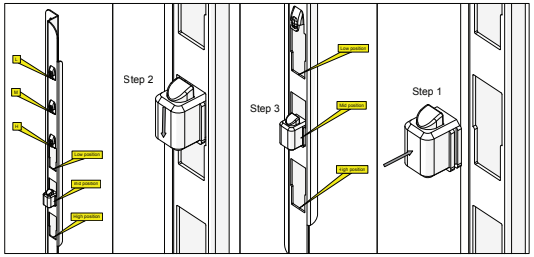

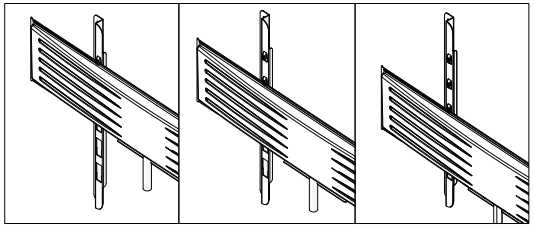

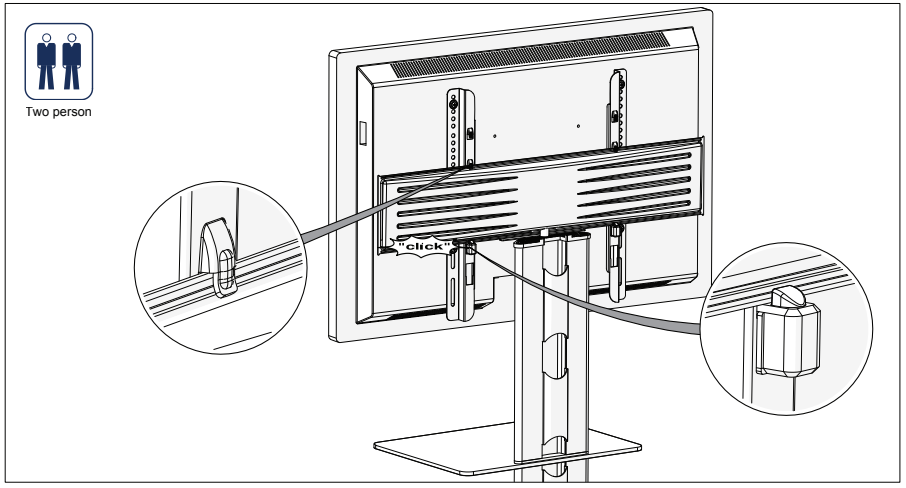

ULTIMATE
www.ultimate.com.tr